



- 1. ALTERNATOR
- 3. 12 VOLT BATTERY
- 4. STARTER SOLENOID
- 5. STARTER MOTOR
- 6. LIGHTING SWITCH
- 7. HEADLAMP DIP SWITCH
- 8. RH HEADLAMP
- 9. LH HEADLAMP
- 10. MAIN BEAM WARNING LAMP
- 11. RH PARKING LAMP
- 12. LH PARKING LAMP
- 13. PANEL LAMPS SWITCH
- 14. PANEL LAMPS
- 15. NUMBER PLATE LAMP
- 16. RH STOP & TAIL LAMP
- 17. LH STOP & TAIL LAMP
- 18. STOP LAMP SWITCH
- 19. FUSE BOX (35 AMP FUSES)
- 20. INTERIOR LIGHT
- 21. RH DOOR SWITCH
- 22. LH DOOR SWITCH
- 23. HORN
- 24. HORN PUSH
- 25. FLASHER UNIT
- 26. INDICATOR SWITCH

- 27. INDICATOR WARNING LAMPS
- 28. RH FRONT TURN LAMP
- 29. LH FRONT TURN LAMP
- 30. RH REAR TURN LAMP
- 31. LH REAR TURN LAMP
- 32. HEATER SWITCH
- 33. HEATER MOTOR
- 34. FUEL GAUGE
- 35. FUEL GAUGE SENDING UNIT
- 36. WINDSHIELD WIPER SWITCH
- 37. WINDSHIELD WIPER MOTOR
- 38. IGNITION SWITCH
- 39. IGNITION COIL
- 40. DISTRIBUTOR
- 41. FUEL PUMP
- 43. OIL PRESS GAUGE
- 44. IGNITION WARNING LAMP
- 45. TACHOMETER
- 46. TEMPERATURE GAUGE
- 47. TEMPERATURE SENDING UNIT
- 48. AMP GAUGE

- 49. REVERSE LIGHTING SWITCH
- 50. REVERSE LAMP
- 57. CIGARETTE LIGHTER
- 61. HORN RELAY
- 77. WINDSCREEN WASHER PUMP
- 78. WINDSCREEN WASHER SWITCH
- 95. SPEEDOMETER
- 110. RH SIDE INDICATOR

- 111. LH SIDE INDICATOR
- 115. HEATED REAR SCREEN SWITCH
- 116. HEATED REAR SCREEN
- 150. HEATED REAR SCREEN WARNING LAMP
- 160. LOW BRAKE FLUID SWITCH
- 165. HANDBRAKE WARNING SWITCH
- 166. BRAKE WARNING LAMP
- 176. LOW FUEL WARNING LAMP
- 232. HAZARD WARNING LAMP

- B - BLACK
- F - GREY
- G - GREEN
- N - BROWN
- O - ORANGE
- P - PURPLE
- R - RED
- U - BLUE
- W - WHITE
- Y - YELLOW

INNOCENTI 1300 EXPORT