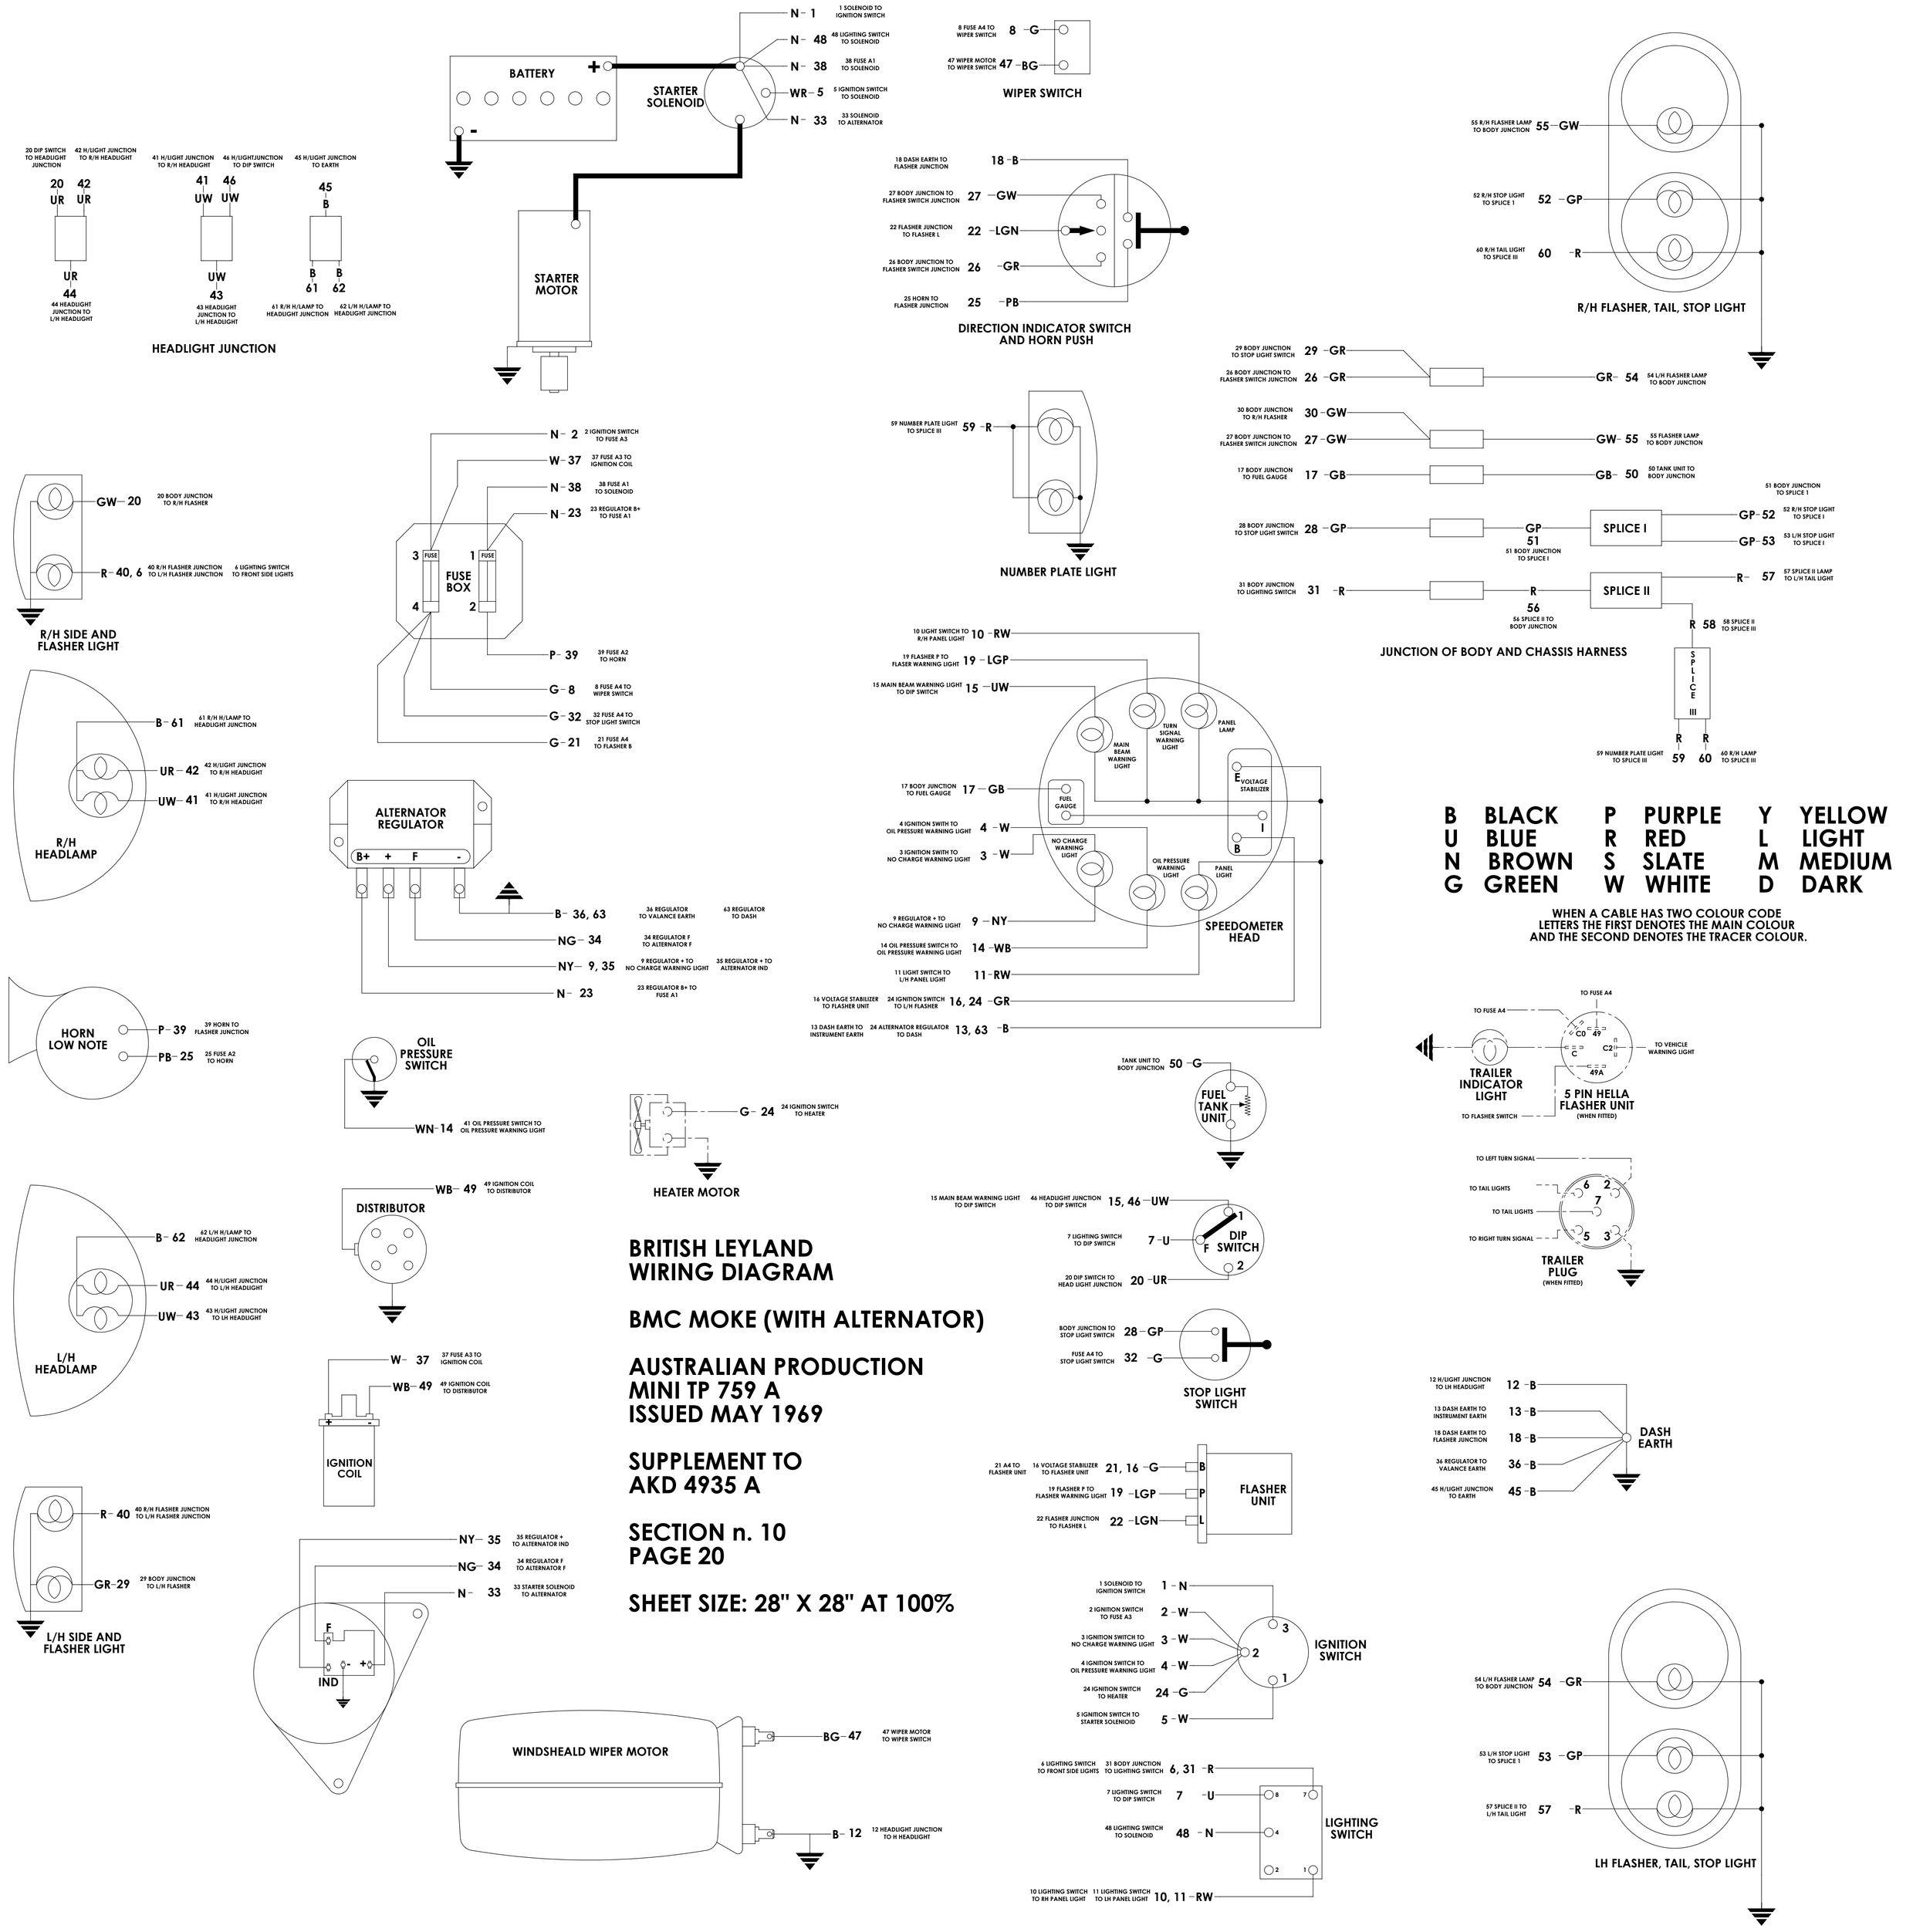
BATTERY
STARTER SOLENOID
STARTER MOTOR
N - 1 1 SOLENOID TO IGNITION SWITCH
N - 48 48 LIGHTING SWITCH TO SOLENOID
N - 38 38 FUSE A1 TO SOLENOID
WR - 5 5 IGNITION SWITCH TO SOLENOID
N - 33 33 SOLENOID TO ALTERNATOR
20 DIP SWITCH TO HEADLIGHT JUNCTION
42 H/LIGHT JUNCTION TO R/H HEADLIGHT
41 H/LIGHT JUNCTION TO R/H HEADLIGHT
46 H/LIGHTJUNCTION TO DIP SWITCH
45 H/LIGHT JUNCTION TO EARTH
20 UR
42 UR
41 UW
46 UW
45 B
UR 44
44 HEADLIGHT JUNCTION TO L/H HEADLIGHT
UW 43
43 HEADLIGHT JUNCTION TO L/H HEADLIGHT
B 61
B 62
61 R/H H/LAMP TO HEADLIGHT JUNCTION
62 L/H H/LAMP TO HEADLIGHT JUNCTION
HEADLIGHT JUNCTION
8 FUSE A4 TO WIPER SWITCH
8 - G
47 WIPER MOTOR TO WIPER SWITCH
47 - BG
WIPER SWITCH
18 DASH EARTH TO FLASHER JUNCTION
18 - B
27 BODY JUNCTION TO FLASHER SWITCH JUNCTION
27 - GW
22 FLASHER JUNCTION TO FLASHER L
22 - LGN
26 BODY JUNCTION TO FLASHER SWITCH JUNCTION
26 - GR
25 HORN TO FLASHER JUNCTION
25 - PB
DIRECTION INDICATOR SWITCH AND HORN PUSH
55 R/H FLASHER LAMP TO BODY JUNCTION
55 - GW
52 R/H STOP LIGHT TO SPLICE 1
52 - GP
60 R/H TAIL LIGHT TO SPLICE III
60 - R
R/H FLASHER, TAIL, STOP LIGHT
59 NUMBER PLATE LIGHT TO SPLICE III
59 - R
NUMBER PLATE LIGHT
29 BODY JUNCTION TO STOP LIGHT SWITCH
29 - GR
26 BODY JUNCTION TO FLASHER SWITCH JUNCTION
26 - GR
GR - 54 54 L/H FLASHER LAMP TO BODY JUNCTION
30 BODY JUNCTION TO R/H FLASHER
30 - GW
27 BODY JUNCTION TO FLASHER SWITCH JUNCTION
27 - GW
GW - 55 55 FLASHER LAMP TO BODY JUNCTION
17 BODY JUNCTION TO FUEL GAUGE
17 - GB
GB - 50 50 TANK UNIT TO BODY JUNCTION
51 BODY JUNCTION TO SPLICE 1
28 BODY JUNCTION TO STOP LIGHT SWITCH
28 - GP
GP 51
51 BODY JUNCTION TO SPLICE I
SPLICE I
GP - 52 52 R/H STOP LIGHT TO SPLICE I
GP - 53 53 L/H STOP LIGHT TO SPLICE I
31 BODY JUNCTION TO LIGHTING SWITCH
31 - R
R 56
56 SPLICE II TO BODY JUNCTION
SPLICE II
R - 57 57 SPLICE II LAMP TO L/H TAIL LIGHT
R 58 58 SPLICE II TO SPLICE III
SPLICE III
R 59
R 60
59 NUMBER PLATE LIGHT TO SPLICE III
60 R/H LAMP TO SPLICE III
JUNCTION OF BODY AND CHASSIS HARNESS
GW - 20 20 BODY JUNCTION TO R/H FLASHER
R - 40, 6 40 R/H FLASHER JUNCTION TO L/H FLASHER JUNCTION 6 LIGHTING SWITCH TO FRONT SIDE LIGHTS
R/H SIDE AND FLASHER LIGHT
N - 2 2 IGNITION SWITCH TO FUSE A3
W - 37 37 FUSE A3 TO IGNITION COIL
N - 38 38 FUSE A1 TO SOLENOID
N - 23 23 REGULATOR B+ TO FUSE A1
FUSE BOX
FUSE
3
1
4
2
P - 39 39 FUSE A2 TO HORN
G - 8 8 FUSE A4 TO WIPER SWITCH
G - 32 32 FUSE A4 TO STOP LIGHT SWITCH
G - 21 21 FUSE A4 TO FLASHER B
B - 61 61 R/H H/LAMP TO HEADLIGHT JUNCTION
UR - 42 42 H/LIGHT JUNCTION TO R/H HEADLIGHT
UW - 41 41 H/LIGHT JUNCTION TO R/H HEADLIGHT
R/H HEADLAMP
ALTERNATOR REGULATOR
B+ + F -
B - 36, 63 36 REGULATOR TO VALANCE EARTH 63 REGULATOR TO DASH
NG - 34 34 REGULATOR F TO ALTERNATOR F
NY - 9, 35 9 REGULATOR + TO NO CHARGE WARNING LIGHT 35 REGULATOR + TO ALTERNATOR IND
N - 23 23 REGULATOR B+ TO FUSE A1
10 LIGHT SWITCH TO R/H PANEL LIGHT
10 - RW
19 FLASHER P TO FLASER WARNING LIGHT
19 - LGP
15 MAIN BEAM WARNING LIGHT TO DIP SWITCH
15 - UW
MAIN BEAM WARNING LIGHT
TURN SIGNAL WARNING LIGHT
PANEL LAMP
E VOLTAGE STABILIZER
I
B
17 BODY JUNCTION TO FUEL GAUGE
17 - GB
FUEL GAUGE
4 IGNITION SWITH TO OIL PRESSURE WARNING LIGHT
4 - W
3 IGNITION SWITH TO NO CHARGE WARNING LIGHT
3 - W
NO CHARGE WARNING LIGHT
OIL PRESSURE WARNING LIGHT
PANEL LIGHT
9 REGULATOR + TO NO CHARGE WARNING LIGHT
9 - NY
14 OIL PRESSURE SWITCH TO OIL PRESSURE WARNING LIGHT
14 - WB
11 LIGHT SWITCH TO L/H PANEL LIGHT
11 - RW
SPEEDOMETER HEAD
16 VOLTAGE STABILIZER TO FLASHER UNIT
24 IGNITION SWITCH TO L/H FLASHER
16, 24 - GR
13 DASH EARTH TO INSTRUMENT EARTH
24 ALTERNATOR REGULATOR TO DASH
13, 63 - B
B BLACK
U BLUE
N BROWN
G GREEN
P PURPLE
R RED
S SLATE
W WHITE
Y YELLOW
L LIGHT
M MEDIUM
D DARK
WHEN A CABLE HAS TWO COLOUR CODE LETTERS THE FIRST DENOTES THE MAIN COLOUR AND THE SECOND DENOTES THE TRACER COLOUR.
HORN LOW NOTE
P - 39 39 HORN TO FLASHER JUNCTION
PB - 25 25 FUSE A2 TO HORN
OIL PRESSURE SWITCH
WN - 14 41 OIL PRESSURE SWITCH TO OIL PRESSURE WARNING LIGHT
G - 24 24 IGNITION SWITCH TO HEATER
HEATER MOTOR
TANK UNIT TO BODY JUNCTION
50 - G
FUEL TANK UNIT
TO FUSE A4
TO FUSE A4
C0 49
C
C2
49A
TO VEHICLE WARNING LIGHT
TRAILER INDICATOR LIGHT
TO FLASHER SWITCH
5 PIN HELLA FLASHER UNIT
(WHEN FITTED)
TO LEFT TURN SIGNAL
TO TAIL LIGHTS
TO TAIL LIGHTS
TO RIGHT TURN SIGNAL
6 2
7
5 3
TRAILER PLUG
(WHEN FITTED)
B - 62 62 L/H H/LAMP TO HEADLIGHT JUNCTION
UR - 44 44 H/LIGHT JUNCTION TO L/H HEADLIGHT
UW - 43 43 H/LIGHT JUNCTION TO LH HEADLIGHT
L/H HEADLAMP
WB - 49 49 IGNITION COIL TO DISTRIBUTOR
DISTRIBUTOR
15 MAIN BEAM WARNING LIGHT TO DIP SWITCH
46 HEADLIGHT JUNCTION TO DIP SWITCH
15, 46 - UW
7 LIGHTING SWITCH TO DIP SWITCH
7 - U
F
1
2
DIP SWITCH
20 DIP SWITCH TO HEAD LIGHT JUNCTION
20 - UR
BODY JUNCTION TO STOP LIGHT SWITCH
28 - GP
FUSE A4 TO STOP LIGHT SWITCH
32 - G
STOP LIGHT SWITCH
W - 37 37 FUSE A3 TO IGNITION COIL
WB - 49 49 IGNITION COIL TO DISTRIBUTOR
IGNITION COIL
12 H/LIGHT JUNCTION TO LH HEADLIGHT
12 - B
13 DASH EARTH TO INSTRUMENT EARTH
13 - B
18 DASH EARTH TO FLASHER JUNCTION
18 - B
36 REGULATOR TO VALANCE EARTH
36 - B
45 H/LIGHT JUNCTION TO EARTH
45 - B
DASH EARTH
21 A4 TO FLASHER UNIT
16 VOLTAGE STABILIZER TO FLASHER UNIT
21, 16 - G
B
19 FLASHER P TO FLASHER WARNING LIGHT
19 - LGP
P
22 FLASHER JUNCTION TO FLASHER L
22 - LGN
L
FLASHER UNIT
R - 40 40 R/H FLASHER JUNCTION TO L/H FLASHER JUNCTION
GR - 29 29 BODY JUNCTION TO L/H FLASHER
L/H SIDE AND FLASHER LIGHT
NY - 35 35 REGULATOR + TO ALTERNATOR IND
NG - 34 34 REGULATOR F TO ALTERNATOR F
N - 33 33 STARTER SOLENOID TO ALTERNATOR
F
- +
IND
BRITISH LEYLAND
WIRING DIAGRAM
BMC MOKE (WITH ALTERNATOR)
AUSTRALIAN PRODUCTION
MINI TP 759 A
ISSUED MAY 1969
SUPPLEMENT TO
AKD 4935 A
SECTION n. 10
PAGE 20
SHEET SIZE: 28" X 28" AT 100%
1 SOLENOID TO IGNITION SWITCH
1 - N
2 IGNITION SWITCH TO FUSE A3
2 - W
3 IGNITION SWITCH TO NO CHARGE WARNING LIGHT
3 - W
4 IGNITION SWITCH TO OIL PRESSURE WARNING LIGHT
4 - W
24 IGNITION SWITCH TO HEATER
24 - G
5 IGNITION SWITCH TO STARTER SOLENIOID
5 - W
3
2
1
IGNITION SWITCH
WINDSHEALD WIPER MOTOR
BG - 47 47 WIPER MOTOR TO WIPER SWITCH
B - 12 12 HEADLIGHT JUNCTION TO H HEADLIGHT
6 LIGHTING SWITCH TO FRONT SIDE LIGHTS
31 BODY JUNCTION TO LIGHTING SWITCH
6, 31 - R
7 LIGHTING SWITCH TO DIP SWITCH
7 - U
48 LIGHTING SWITCH TO SOLENOID
48 - N
8 7 4 2 1
LIGHTING SWITCH
10 LIGHTING SWITCH TO RH PANEL LIGHT
11 LIGHTING SWITCH TO LH PANEL LIGHT
10, 11 - RW
54 L/H FLASHER LAMP TO BODY JUNCTION
54 - GR
53 L/H STOP LIGHT TO SPLICE 1
53 - GP
57 SPLICE II TO L/H TAIL LIGHT
57 - R
LH FLASHER, TAIL, STOP LIGHT